

Power Fail Monitor Quick Start Guide



Thank you for purchasing the Raptor Power Fail Monitor (PFM). This guide describes how to install the PFM.

If you need further assistance, contact RLE Technologies on our website at <http://www.rletech.com/> (go to the **Support Link**) or by calling **970.484.6510, Option 2.**



Installation and Setup



The PFM is in its normal state when power is applied. The state noted on the Form C output relay is the state of the output when the PFM is energized.

To install the PFM:

- 1 Wire the relay output to the appropriate input on the Falcon system, RA1x2, or other equipment that will accept a digital dry contact input.
- 2 Plug the PFM into a 120V outlet.

