



### Panel/Damper Assembled Data:

- o Height/Depth with damper installed - 4"
- o Full Open Flow Restriction 5-15%
- o Full Closed Flow Restriction 85-95%
- o Full Closed Leakage 5-10% at .04 SP

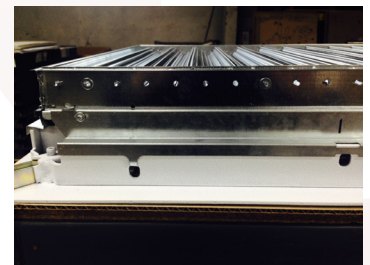

1. Place the floor panel face down on foam or a non-marring surface.
2. Install the OPD damper over the floor panel with the direction of the damper openings perpendicular to the direction of the panel air flow fins.
3. The damper should straddle to the outer side of the floor panel's outside frame on all 4 sides.
4. When properly placed on the floor panel - the dampers 8 mounting tabs should be aligned with the holes in the panel's outside frame.
5. Using a flat blade screw driver - push the 8 mounting tabs into the holes in the outside frame.
6. Once this is completed, the panel can be installed into the floor. Adjustment to the damper can be done from top side of the panel to the exact desired setting by placing a flat blade screw driver into the operating slot on the OPD Damper.

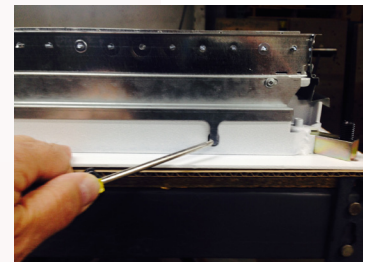

Need additional assistance, **Customer Service 800.518.1519**