

# LD5200

Firmware Version	Features	Release Date
v2.2.27	<ul style="list-style-type: none"><li>&gt; Make sure bacnet leakdistance object is zero if leak is not present</li><li>&gt; Bacnet leakdistance object is a minimum of 1 when a leak is present</li></ul>	11/10/2020
v2.2.26	<ul style="list-style-type: none"><li>&gt; Changed email multiple To: lines to single To: line for multiple recipients</li></ul>	11/1/2020
v2.2.25	<ul style="list-style-type: none"><li>&gt; Added processing for bacnet mstp "reply postponed"</li><li>&gt; Corrected web gui orange color on slave bacnet controllers</li><li>&gt; Add date/time header to sent emails</li><li>&gt; Corrected modbus register 30011 - virtual zones 32-17 in alarm (was always reading zero)</li><li>&gt; Add option for European time formatting</li><li>&gt; Fixed latched cable break unable to be reset from LCD screen</li></ul>	10/13/2020
v2.2.19A	<ul style="list-style-type: none"><li>&gt; Fixed LCD alarm history acknowledgements (main.c, alarmh.c, lcd.c, common.h)</li></ul>	12/20/2018
v2.2.19	<ul style="list-style-type: none"><li>&gt; Fix red, blinking alarm box showing up on every nested map</li></ul>	10/10/2018
v2.2.18	<ul style="list-style-type: none"><li>&gt; Corrected web page BACnet distribution table display</li></ul>	6/18/2018
v2.2.17	<ul style="list-style-type: none"><li>&gt; Corrected alarm history leak distance when Modbus slaves virtual zones when in Meters</li><li>&gt; Corrected Web page display of Modbus slaves virtual zone when unit is in Meters</li><li>&gt; Corrected Map Alarm Coordinates - Text for Master Zone Map when unit is set to Meters</li></ul>	6/13/2018
v2.2.16	<ul style="list-style-type: none"><li>&gt; Added Cable Relay on/off to LCD</li><li>&gt; Added power fail option for the PM relay</li></ul>	4/19/2018